 


HITACHI

日立牌圆盘磨光机 Disc Sander

S 18SB · S 15SB

使用说明书
Handling instructions

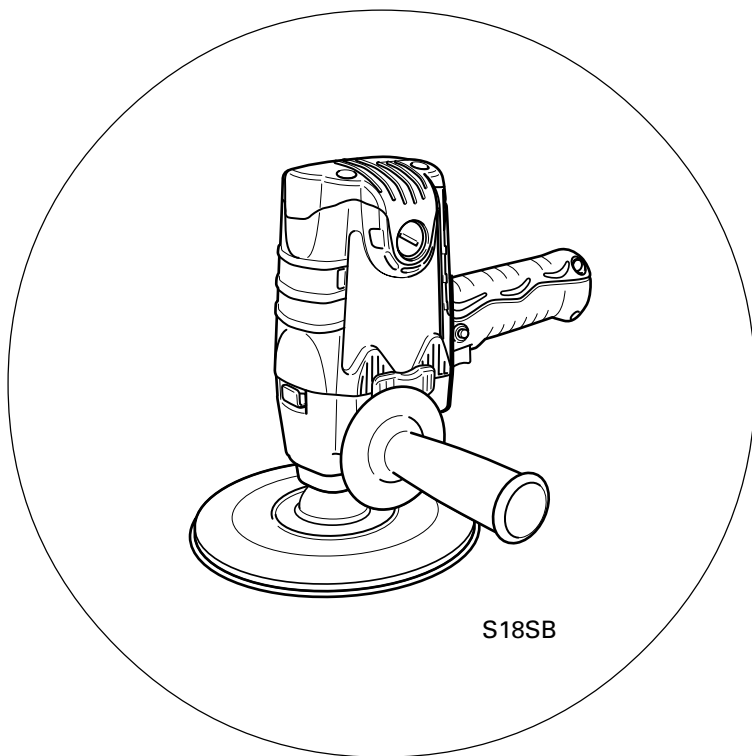

 
 
 
 
S18SB



使用前务请详加阅读。

Read through carefully and understand these instructions before use.

Hitachi Koki

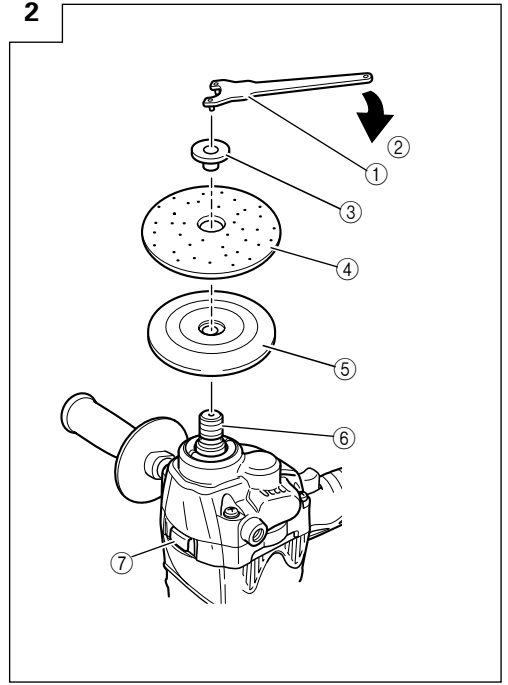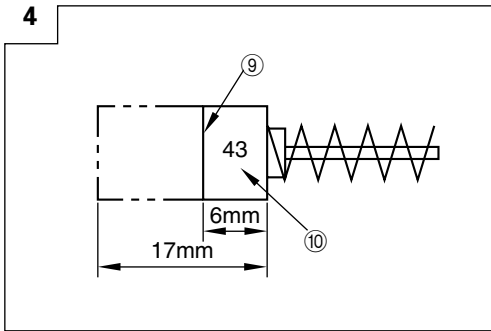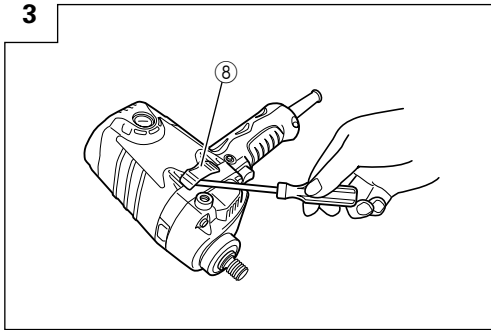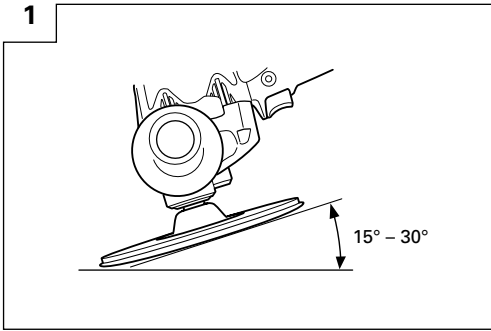

①	扳手	Wrench
②	紧	Tighten
③	垫片螺帽	Washer nut
④	砂盘	Sanding disc
⑤	橡胶垫圈	Rubber pad
⑥	主轴	Spindle
⑦	锁定杆	Lock lever
⑧	空气保护罩	Air cover
⑨	磨损极限	Wear limit
⑩	碳刷号	No. of carbon brush

一般安全规则

警告！

阅读说明

没有按照以下列举的说明而使用或操作将导致触电、着火和/或严重伤害。

在所有以下列举的警告中术语“电动工具”指市电驱动（有线）电动工具或电池驱动（无线）电动工具。

保存这些说明

1) 工作场地

- a) 保持工作场地清洁和明亮。
混乱和黑暗的场地会引发事故。
- b) 不要在易爆环境，如有易燃液体、气体或粉尘的环境下操作电动工具。
电动工具产生的火花会点燃粉尘或气体。
- c) 让儿童和旁观者离开后操纵电动工具。
分心会使你放松控制。

2) 电气安全

- a) 电动工具插头必须与插座相配。
绝不能以任何方式改装插头。
需接地的电动工具不能使用任何转换插头。
未经改装的插头和相配的插座将减少触电危险。
- b) 避免人体接触接地表面，如管道、散热片和冰箱。
如果你身体接地会增加触电危险。
- c) 不得将电动工具暴露在雨中或潮湿环境中。
水进入电动工具将增加触电危险。
- d) 不得滥用电线。
绝不能用电线搬运、拉动电动工具或拔出其插头。
让电动工具远离热、油、锐边或运动部件。
受损或缠绕的电线会增加触电危险。
- e) 当在户外使用电动工具时，使用适合户外使用的外接电线。
适合户外使用的电线将减少触电危险。

3) 人身安全

- a) 保持警觉，当操作电动工具时关注所从事的操作并保持清醒。
切勿在有疲倦、药物、酒精或治疗反应下操作电动工具。
在操作电动工具期间精力分散会导致严重人身伤害。
- b) 使用安全装置。始终配戴护目镜。
安全装置，诸如适当条件下的防尘面具、防滑安全鞋、安全帽、听力防护等装置能减少人身伤害。
- c) 避免突然起动。
确保开关在插入插头时处于关断位置。
手指放在已接通电源的开关上或开关处于接通时插入插头可能会导致危险。

- d) 在电动工具接通之前，拿掉所有调节钥匙或扳手。
遗留在电动工具旋转零件上的扳手或钥匙会导致人身伤害。

- e) 手不要伸得太长。
时刻注意脚下和身体平衡。
这样在意外情况下能很好地控制电动工具。

- f) 着装适当。
不要穿宽松衣服或佩带饰品。
让你的头发、衣服和袖子远离运动部件。
宽松衣服、佩饰或长发可能会卷入运动部件。
- g) 如果提供了与排屑装置、集尘设备连接用的装置，则确保他们连接完好且使用得当。
使用这些装置可减少碎屑引起的危险。

4) 电动工具使用和注意事项

- a) 不要滥用电动工具，根据用途使用适当的电动工具。
选用适当的设计额定值的电动工具会使你工作更有效、更安全。
- b) 如果开关不能接通或关断工具电源，则不能使用该电动工具。
不能用开关来控制的电动工具是危险的且必须进行修理。
- c) 在进行任何调节、更换附件或贮存电动工具之前，必须从电源上拔掉插头和/或将电池盒脱离电源。
这种防护性措施将减少电动工具突然起动的危险。
- d) 将闲置电动工具贮存在儿童所及范围之外，并且不要让不熟悉电动工具或对这些说明不了解的人操作电动工具。
电动工具在未经训练的用户手中是危险的。
- e) 保养电动工具。检查运动件的安装偏差或卡住、零件破损情况和影响电动工具运行的其他条件。
如有损坏，电动工具必须在使用前修理好。
许多事故由维护不良的电动工具引发。
- f) 保持切削刀具锋利和清洁。
保养良好的有锋利切削刃的刀具不易卡住而且容易控制。
- g) 按照使用说明书以及打算使用的电动工具的特殊类型要求的方式，考虑作业条件和进行的作业来使用电动工具、附件和工具的刀头等。
将电动工具用作那些与要求不符的操作可能会导致危险情况。

5) 维修

- a) 将你的电动工具送交专业维修人员，必须使用同样的备件进行更换。
这样将确保所维修的电动工具的安全性。

注意事项

不可让儿童和体弱人士靠近工作场所。
应将不使用的工具存放在儿童和体弱人士接触不到的地方。

砂磨，砂光，钢丝砂光，抛光或砂磨切割操作的通用安全警告

- a) 该电动工具是用于实现砂光机功能的。阅读随该电动工具提供的所有安全警告、说明、图解和规定。
不了解以下所列所有说明将导致电击、着火和/或严重伤害。
- b) 不推荐用该电动工具进行诸如砂磨、刷光、抛光或切断等操作。
电动工具不按指定的功能去操作，可能会发生危险和引起人身伤害。
- c) 不使用非工具制造商推荐和专门设计的附件。
否则该附件可能被装到你的电动工具上，而它不能保证安全操作。
- d) 附件的额定速度必须至少等于电动工具上标出的最大速度。
附件以比其额定速度大的速度运转会发生爆裂和飞溅。
- e) 附件的外径和厚度必须在电动工具额定能力范围之内。
不正确的附件尺寸不能得到充分防护或控制。
- f) 砂轮、法兰盘、靠背垫或任何其他附件的轴孔尺寸必须适合于安装到电动工具的主轴上。
带轴孔的、与电动工具安装件不配的附件将会失稳、过度振动并会引起失控。
- g) 不要使用损坏的附件。在每次使用前要检查附件，例如砂轮是否有碎片和裂缝，靠背垫是否有裂缝、撕裂或过度磨损，钢丝刷是否松动或金属丝是否断裂。如果电动工具或附件跌落了，检查是否有损坏或安装没有损坏的附件。检查和安装附件后，让自己和旁观者的位置远离旋转附件的平面，并以电动工具最大空载速度运行1min。
损坏的附件通常在该试验时会碎裂。
- h) 戴上防护用品。根据适用情况，使用面罩、安全护目镜或安全眼镜。适用时，戴上防尘面具、听力保护器、手套和能挡小磨料或工件碎片的工作围裙。
眼防护罩必须挡住各种操作产生的飞屑。防尘面具或口罩必须能过滤操作产生的颗粒。长期暴露在高强度噪声中会引起失聪。
- i) 让旁观者与工作区域保持一安全距离。任何进入工作区域的人必须戴上防护用品。

- 工件或破损附件的碎片可能会飞出并引起紧靠着操作区域的旁观者的伤害。切割附件触及带电导线会使电动工具外露的金属零件带电，并使操作者触电。
- j) 当在切割附件有可能切割到暗线或自身电线的场所进行操作时，只能通过绝缘握持面来握住电动工具。
切割附件碰到一根带电导线可能会使电动工具的外露金属零件带电并使操作者发生电击危险。
- k) 使软线远离旋转的附件。
如果控制不当、软线可能被切断或缠绕，并使得你的手或手臂可能被卷入旋转附件中。
- l) 直到附件完全停止运动才放下电动工具。
旋转的附件可能会抓住表面并拉动电动工具而让你失去对工具的控制。
- m) 当携带电动工具时不要开动它。
意外地触及旋转附件可能会缠绕你的衣服而使附件伤害身体。
- n) 经常清理电动工具的通风口。
电动机风扇会将灰尘吸进机壳，过多的金属粉末沉积会导致电气危险。
- o) 不要在易燃材料附件操作电动工具。
火星可能会点燃这些材料。
- p) 不要使用需用冷却液的附件。
用水或其他冷却液可能会导致电腐蚀或电击。

反弹和相关警告

反弹是因卡住或缠绕住的旋转砂轮、靠背垫、或其他附件而产生的突然反作用力。卡住或缠绕会引起旋转附件的迅速堵转，随之使失控的电动工具在卡住点产生与附件旋转方向相反的运动。
例如，如果砂轮被工件缠绕或卡住，伸入卡住点的砂轮边缘可能会进入材料表面而引起砂轮爬出或反弹。砂轮可能飞向或飞离操作者，这取决于砂轮在卡住点的运动方向。在此条件下砂轮也可能碎裂。
反弹是电动工具误用和/或不正确操作工序或条件的结果，可以通过采取以下给出的适当预防措施得以避免。

- a) 保持紧握电动工具，使你的身体和手臂处于正确状态以抵抗反弹力。如有辅助手柄，则要一直使用，以便最大限度控制住起启动时的反弹力或反力矩。

如采取合适的预防措施，操作者就可以控制反力矩或反弹力。

- b) **绝不能将手靠近旋转附件。**
附件可能会反弹碰到手。
- c) **不要站在发生反弹时电动工具可能移动到的地方。**
反弹将在缠绕点驱使工具逆砂轮运动方向运动。
- d) **当在尖角、锐边等处作业时要特别小心。避免附件的弹跳和缠绕。**
尖角、锐边和弹跳具有缠绕旋转附件的趋势并引起反弹的失控。
- e) **不要附上锯链、木雕刀片或带齿锯片。**
这些锯片会产生频繁的反弹和失控。

砂光操作的专用安全警告

- a) **当砂光时，不要使用超大砂盘纸。选用砂盘纸时应按照制造商的推荐。**

规格

型式	S18SB	S15SB
电压（按地区）*	(110V, 115V, 120V, 127V, 220V, 230V, 240V) ~	
输入功率*	705 W	
无负荷速度	4500 转/分	
橡胶垫圈外径	180 mm	150 mm
重量（不含线缆）	2.0 kg	

*当须改变地区时应检查产品上的铭牌。

标准附件

型式	S18SB	S15SB
180 mm 砂盘*1	1	—
150 mm 砂盘*1	—	1
橡胶垫圈	1	
扳手	1	
侧柄	1	

*1 粒度：P50

标准附件可能不预先通告而径予更改。

超出砂光垫盘的大砂盘纸有撕裂的危险并且会引起缠绕、砂盘的撕裂或反弹。

使用圆盘磨光机时的注意事项

1. 请远离正在旋转的砂盘。
2. 严密注意打火花。
3. 使用时握牢砂纸机。
4. 请勿将正在旋转的圆盘磨光机放在无人看管的地板上。
5. 操作时当心周围的人。
6. 更换砂盘时，请遵循有关使用说明书上所规定的顺序。
7. 切勿将磨输装在本工具上而将本工具当作磨光机来使用。

选购附件（分开销售）

〈用于 S18SB 机型〉

- 180 mm 砂盘
有十一种砂盘可供选购，其粒度分别为P16、P20、P24、P30、P36、P40、P50、P60、P80、P100和P120。订购砂盘时，请指明所需砂盘的粒度。

〈用于 S15SB 机型〉

- 150 mm 砂盘
有十一种砂盘可供选购，其粒度分别为P16、P20、P24、P30、P36、P40、P50、P60、P80、P100和P120。订购砂盘时，请指明所需砂盘的粒度。

选购附件可能不预先通告而径予更改。

用途

- 金属表面的磨光。
- 油漆前的金属表面的初步磨光，金属表面上的铁锈或旧漆的清除。
- 木工件的最后加工，接合面或装配面上木料的突出部分。
- 油漆前的木材表面的初步磨光。

作业之前

1. 电源

确认所使用的电源与工具铭牌上标示的规格是否相符。

2. 电源开关

确认电源开关是否切断。若电源开关接通，则插头插入电源插座时电动工具将出其不意地立刻转动，从而招致严重事故。

3. 延伸线缆

若作业场所移到离开电源的地点，应使用容量足够、铠装合适的延伸线缆，并且要尽可能地短些。

注意：损坏和导线一定要更换或修理。

4. 安装砂盘

安装或拆卸砂盘时，请参照“砂盘的安装/拆卸”一节的内容。有多种砂盘可供选购，请选择最适合于您的研磨工作的砂盘。

5. 固定侧柄

把侧柄旋进罩中。

6. 检查锁定杆

在打开电源开关之前按两下锁定杆，检查它是否已被释放（参照图2）。

7. 将空气护罩安装到侧面装有手柄的通风口，从而在运转期间尽可能转移电动机的冷风气流。将空气护罩凸起挂到通风口，然后在安装时将其推入。取出时，请按照图3所示用螺丝刀等工具将其拉出。

圆盘磨光机的实际应用

1. 请勿用力将砂盘压在打磨表面，只要依靠圆盘磨光机本身的重量即可达到打磨目的。因此，操作时，只要将砂盘轻触打磨表面即可。用力压砂盘的话，

砂盘的转速会降低，同时会使打磨表面粗糙不平。另外，马达也会因过载而发生故障。

2. 不必将砂盘的整个表面压在要打磨的金属表面上，请将砂盘稍微倾斜一点，使其与打磨表面约成 $15\sim 30^\circ$ （图1）。

3. 圆盘磨光机的开关

本工具中，采用了快断式扳机来开关圆盘磨光机。拉起扳机时，开关便被打开，而松开扳机时，开关便被关上。若想使开关长时间开着以便于连续操作，可使用停止销。使用停止销的话，即使松开扳机，开关也不会被关掉。

（先拉起扳机开关，然后按下停止销。）若想关掉开关，请再一次拉起扳机。这样停止销便会被松开。

4. 使用须知

使用本工具之后，在砂盘没有完全停止之前，请勿将其立即放在有许多细层、脏物和灰尘的地方。

注意：圆盘磨光机不用时，应将电源关掉。

砂盘的安装/拆卸（图2）

注意：确认开关已断开并且从电源插座中拔去电源插头以避免严重事故。

- (1) 将垫片、橡胶垫圈及砂盘依次装在主轴上。
 - (2) 用一只手按锁定杆，同时用另一只手慢慢转动橡胶垫圈锁住主轴。
用附带的扳手旋紧轮状垫片。
- 请按与上述相反的顺序来拆卸砂盘。

注意：确认锁定杆被解除锁定；可在打开圆盘磨光机之前通过掀两下锁定杆进行检查。

维护和检查

1. 检查安装螺钉

要经常检查安装螺钉是否紧固妥善。若发现螺钉松了，应立即重新扭紧，否则会导致严重的事故。

2. 电动机的维护

电动机绕线是电动工具的“心脏”。应仔细检查有无损伤，是否被油液或水沾湿。

3. 检查碳刷（图 4）

马达使用碳刷，它是消耗部品，因为使用过久的碳刷将会导致马达故障，用具有相同碳刷号的新碳刷去更换旧的，碳刷编号用数字表示碳刷何时用旧或接近于磨损极限，此外，要经常保持碳刷清洁以及保证它在刷握里能自由滑动。

4. 更换碳刷

用无头螺丝刀卸下碳刷盖，然后可以很容易地取下碳刷。

5. 维修零部件一览表

- A: 项目号
- B: 代码号
- C: 使用数
- D: 备注

注意：

日立牌电动工具的维修、改造和检查须由经日立公司授权的维修中心进行。

当要求维修或其他保养服务时，若将此零部件一览表与电动工具一起呈交给经日立公司授权的维修中心，将有助于维修或保养工作。

在操作和维修电动工具时，必须遵守贵国制定的安全的有关规则和标准。

改造：

日立牌电动工具经常加以改善和改造以采用最新的先进技术。

因此，某些零部件（例如代码号和（或）设计）可能变更，恕不另行通知。

注：为求改进，本手册所载规格可能不预先通告而径予更改。

GENERAL SAFETY RULES

WARNING!

Read all instructions

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

SAVE THESE INSTRUCTIONS

1) Work area

- a) **Keep work area clean and well lit.**
Cluttered and dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
Power tools create sparks which may ignite the dust of fumes.
- c) **Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.**
Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
Use of a cord suitable for outdoor use reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**
A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.**
- c) **Avoid accidental starting. Ensure the switch is in the off position before plugging in.**
Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.

- d) **Remove any adjusting key or wrench before turning the power tool on.**

A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.**

This enables better control of the power tool in unexpected situations.

- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.**

Loose clothes, jewellery or long hair can be caught in moving parts.

- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**

Use of these devices can reduce dust related hazards.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.**

The correct power tool will do the job better and safer at the rate for which it was designed.

- b) **Do not use the power tool if the switch does not turn it on and off.**

Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

- c) **Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.**

Such preventive safety measures reduce the risk of starting the power tool accidentally.

- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**

Power tools are dangerous in the hands of untrained users.

- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation.**

If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- f) **Keep cutting tools sharp and clean.**

Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- g) **Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed.**

Use of the power tool for operations different from intended could result in a hazardous situation.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.**

This will ensure that the safety of the power tool is maintained.

PRECAUTION

Keep children and infirm persons away.

When not in use, tools should be stored out of reach of children and infirm persons.

SAFETY WARNINGS COMMON FOR GRINDING, SANDING, WIRE BRUSHING, POLISHING OR ABRASIVE CUTTING-OFF OPERATIONS

- a) **This power tool is intended to function as a sander. Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.**
- b) **Operations such as grinding, wire brushing or polishing or cutting-off are not recommended to be performed with this power tool. Operations for which the power tool was not designed may create a hazard and cause personal injury.**
- c) **Do not use accessories which are not specifically designed and recommended by the tool manufacturer. Just because the accessory can be attached to your power tool, it does not assure safe operation.**
- d) **The rated speed of the accessory must be at least equal to the maximum speed marked on the power tool. Accessories running faster than their rated speed can break and fly apart.**
- e) **The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool. Incorrectly sized accessories cannot be adequately guarded or controlled.**
- f) **The arbour size of wheels, flanges, backing pads or any other accessory must properly fit the spindle of the power tool. Accessories with arbour holes that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.**
- g) **Do not use a damaged accessory. Before each use inspect the accessory such as abrasive wheels for chips and cracks, backing pad for cracks, tear or excess wear, wire brush for loose or cracked wires. If power tool or accessory is dropped, inspect for damage or install an undamaged accessory. After inspecting and installing an accessory, position yourself and bystanders away from the plane of the rotating accessory and run the power tool at maximum no-load speed for one minute. Damaged accessories will normally break apart during this test time.**
- h) **Wear personal protective equipment. Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and workshop apron capable of stopping small abrasive or workpiece fragments. The eye protection must be capable of stopping flying debris generated by various operations. The dust mask or respirator must be capable of filtering particles generated by your operation. Prolonged exposure to high intensity noise may cause hearing loss.**
- i) **Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment.**

Fragments of workpiece or of a broken accessory may fly away and cause injury beyond immediate area of operation.

- j) **Hold power tool by insulated gripping surfaces only, when performing an operation where the cutting accessory may contact hidden wiring or its own cord. Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and shock the operator.**
- k) **Position the cord clear of the spinning accessory. If you lose control, the cord may be cut or snagged and your hand or arm may be pulled into the spinning accessory.**
- l) **Never lay the power tool down until the accessory has come to a complete stop. The spinning accessory may grab the surface and pull the power tool out of your control.**
- m) **Do not run the power tool while carrying it at your side. Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.**
- n) **Regularly clean the power tool's air vents. The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.**
- o) **Do not operate the power tool near flammable materials. Sparks could ignite these materials.**
- p) **Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in electrocution or shock.**

KICKBACK AND RELATED WARNINGS

Kickback is a sudden reaction to a pinched or snagged rotating wheel, backing pad or any other accessory. Pinching or snagging causes rapid stalling of the rotating accessory which in turn causes the uncontrolled power tool to be forced in the direction opposite of the accessory's rotation at the point of the binding.

For example, if an abrasive wheel is snagged or pinched by the workpiece, the edge of the wheel that is entering into the pinch point can dig into the surface of the material causing the wheel to climb out or kick out. The wheel may either jump toward or away from the operator, depending on direction of the wheel's movement at the point of pinching. Abrasive wheels may also break under these conditions. Kickback is the result of power tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

- a) **Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces. Always use auxiliary handle, if provided, for maximum control over kickback or torque reaction during start-up. The operator can control torque reactions or kickback forces, if proper precautions are taken.**
- b) **Never place your hand near the rotating accessory. Accessory may kickback over your hand.**
- c) **Do not position your body in the area where power tool will move if kickback occurs. Kickback will propel the tool in direction opposite to the wheel's movement at the point of snagging.**

- d) **Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory.**
Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.
- e) **Do not attach a saw chain woodcarving blade or toothed saw blade.**
Such blades create frequent kickback and loss of control.

SAFETY WARNINGS SPECIFIC FOR SANDING OPERATIONS

- a) **Do not use excessively oversized sanding disc paper. Follow manufacturers recommendations, when selecting sanding paper.**
Larger sanding paper extending beyond the sanding pad presents laceration hazard and may cause snagging, tearing of the disc or kickback.

SPECIFICATIONS

Model	S18SB	S15SB
Voltage (by areas)*	(110V, 115V, 120V, 127V, 220V, 230V, 240V)∩	
Power Input*	705 W	
No-Load Speed	4500 / min.	
Rubber pad outer dia.	180 mm	150 mm
Weight (without cord)	2.0 kg	

*Be sure to check the nameplate on product as it is subject to change by areas.

STANDARD ACCESSORIES

Model	S18SB	S15SB
180 mm Sanding disc* ¹	1	—
150 mm Sanding disc* ¹	—	1
Rubber Pad	1	
Wrench	1	
Side Handle	1	

*¹ Grain size : P50

Standard accessories are subject to change without notice.

OPTIONAL ACCESSORIES (sold separately)

<For Model S18SB>

- 180 mm Sanding disc

There are eleven different kinds of sanding disc, having grain sizes of P16, P20, P24, P30, P36, P40, P50, P60, P80, P100, P120. When placing your order, please specify the grain size of the disc desired.

<For Model S15SB>

- 150 mm Sanding disc

There are eleven different kinds of sanding disc, having grain sizes of P16, P20, P24, P30, P36, P40, P50, P60, P80, P100, P120. When placing your order, please specify the grain size of the disc desired.

Optional accessories are subject to change without notice.

PRECAUTIONS ON USING DISC SANDER

1. Keep away from a revolving sanding disc.
2. Pay strict attention to sparks.
3. Hold the disc sander firmly.
4. Do not leave the revolving disc sander unattended on the floor.
5. Be careful those around one while operating.
6. Follow the procedures of these handling instructions on sanding disc replacement.
7. Never mount a depressed center wheel on this tool and attempt to use it as a disc grinder.

APPLICATIONS

- Sanding metal surfaces.
- Preliminary sanding of metal surfaces before painting, rust removal, removing old paint before repainting.
- Finishing woodwork, correcting projections of timbers from joints or assemblies.
- Preliminary sanding of wood surfaces before applying paint.

PRIOR TO OPERATION

1. Power source

Ensure that the power source to be utilized conforms to the power requirements specified on the product nameplate.

2. Power switch

Ensure that the power switch is in the OFF position. If the plug is connected to a receptacle while the power switch is in the ON position, the power tool will start operating immediately, inviting serious accident.

3. Extension cord

When the work area is removed from the power source, use an extension cord of sufficient thickness and rated capacity. The extension cord should be kept as short as practicable.

CAUTION:

Damaged cord must be replaced or repaired.

4. Attaching sanding disc

For attachment/removal of the sanding disc, refer to "ATTACHMENT/REMOVAL OF SANDING DISC". Many types of sanding discs are available; select one appropriate to the work.

5. Fixing the side handle

Screw the side handle into the housing.

6. Confirm the lock lever

Confirm that the lock lever is disengaged by pushing lock lever two or three times before switching the power tool on (See Fig. 2)

7. Install the air cover on the air vent on the side where the side handle is attached to divert the cooling air flow of the motor during operation as much as possible. Hook tab of the air cover to the air vent and push in the tab when installing. Use a screwdriver etc. to pull as shown in Fig. 3 when removing.

PRACTICAL SANDER APPLICATIONS

1. Do not heavily push the sanding disc to the surface to be ground. Grinding operation can be achieved with the weight of the machine alone, so maintain the sanding disc to an extent that it lightly touches the surface to be ground. When the sanding disc is pushed heavily, its revolving speed drops, creating an unevenly finished surface and causing motor seizure from overload.
2. Rather than applying the entire disc surface to the metal surface to be ground, use the sander by inclining it approximately 15° — 30° to grind with the disc peripheral portion. (Fig. 1)
3. **Switching on the sander**
The switch is of the quick-break trigger system. When the trigger is pulled, the switch turns on; and when it is released, the switch turns off.
When it is desired to keep the power on for a prolonged period in continuous use, the stopper can be used to keep the switch on even after the trigger has been released. (First pull the trigger, and then press the stopper.) To turn the switch off, first pull the trigger again to disengage the stopper.
4. **Precaution after use**
Do not lay the sander down immediately after using on a place where there are many shavings, much dirt and dust until it has completely stopped revolving.

CAUTION

When the disc sander is not in use, the power source should be disconnected.

ATTACHMENT/REMOVAL OF SANDING DISC (Fig. 2)

CAUTION: Be sure to switch power OFF and disconnect the attachment plug from the receptacle to avoid serious trouble.

- (1) Attach washer, rubber pad and sanding disc on the spindle, in that order.
 - (2) While pushing the lock lever with one hand, lock the spindle by turning the rubber pad slowly with the other hand.
Tighten the wheel washer by using the supplied wrench.
- Remove the sanding disc in the reverse order to attachment.

CAUTION: Confirm that the lock lever is disengaged by pushing lock lever two or three times before switching the disc sander on.

MAINTENANCE AND INSPECTION

1. Inspecting the mounting screws

Regularly inspect all mounting screws and ensure that they are properly tightened. Should any of the screws be loose, retighten them immediately. Failure to do so could result in serious hazard.

2. Maintenance of the motor

The motor unit winding is the very "heart" of the power tool. Exercise due care to ensure the winding does not become damaged and/or wet with oil or water.

3. Inspecting the carbon brushes (Fig. 4)

The motor employs carbon brushes which are consumable parts. Since an excessively worn carbon brush could result in motor trouble, replace the carbon brushes with new ones which have the same carbon brush No. shown in the figure when they become worn to or near the "wear limit". In addition, always keep carbon brushes clean and ensure that they slide freely within the brush holders.

4. Replacing carbon brushes

Disassemble the brush caps with a slotted-head screwdriver. The carbon brushes can then be easily removed.

5. Service parts list

- A: Item No.
- B: Code No.
- C: No. Used
- D: Remarks

CAUTION

Repair, modification and inspection of Hitachi Power Tools must be carried out by a Hitachi Authorized Service Center.

This Parts List will be helpful if presented with the tool to the Hitachi Authorized Service Center when requesting repair or other maintenance.

In the operation and maintenance of power tools, the safety regulations and standards prescribed in each country must be observed.

 
MODIFICATION

Hitachi Power Tools are constantly being improved and modified to incorporate the latest technological advancements.

Accordingly, some parts (i.e. code numbers and/or design) may be changed without prior notice.


Note

Due to HITACHI's continuing program of research and development, the specifications herein are subject to change without prior notice.

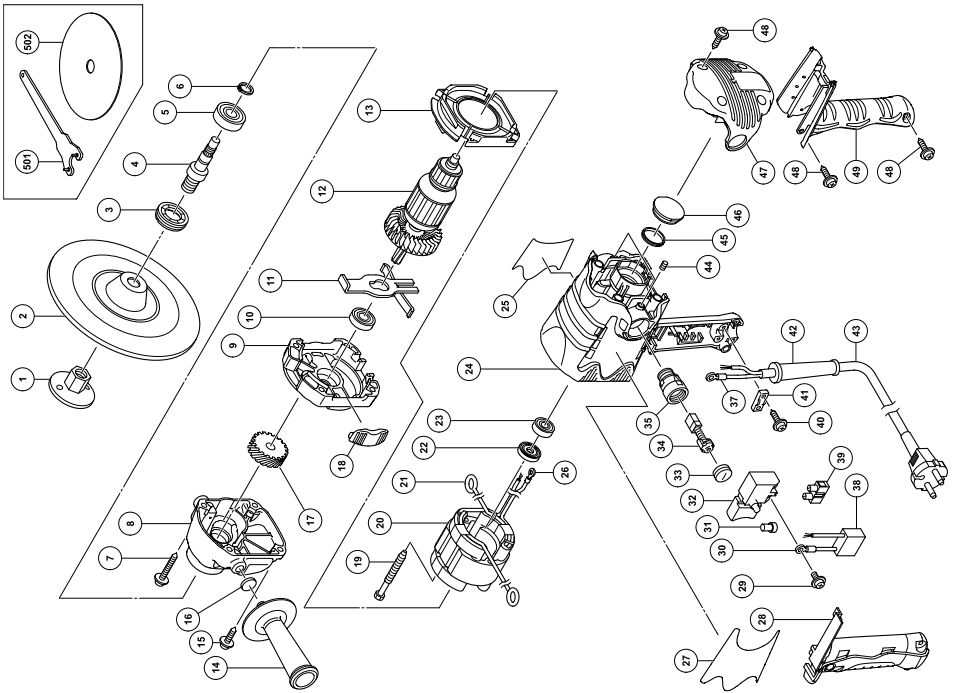



A	B	C	D	A	B	C	D
1-1	953-381	1		35	958-900	2	
1-2	953-246Z	1	M14 "EUROPE"	37	980-063	1	"EUROPE, CHN"
2-1	953-255	1	D16	38	930-039	1	"EUROPE, MAL, CHN"
2-2	953-247Z	1	D14 "EUROPE"	39	938-307	1	
3	944-005	1		40	984-750	2	D4 x 16
4-1	325-501	1	"EUROPE"	41	937-631	1	
4-2	325-502	1	620IDDCMPS2L	42	953-327	1	D8.8
5	620-IDD	1		43	-----	1	
6	939-542	1	D5 x 55	44	938-477	2	M5 x 8
7	309-778	2	"16"	45	995-662	1	
8	325-499	1		46	315-069	1	
9	325-498	1		47	325-489	1	
10	600-0DD	1	6000DDCMPS2L	48	301-653	7	D4 x 20
11	325-477	1		49	325-490	1	
12-1	360-758E	1	220V-230V	501	325-491	1	180MM C-P50
12-2	360-758F	1	240V	502-1	314-090	1	180MM C-P16
13	325-474	1		502-2	314-084	1	"ESP"
14	994-322	1					
15	323-209	2	D5 x 35				
16	937-033	2					
17	325-500	1					
18	325-483	1					
19	992-509	2	D5 x 45				
20-1	340-656E	1	220V-230V "21, 26"				
20-2	340-656F	1	240V "21, 26"				
20-3	340-656G	1	220V-230V "21, 26"				
			"EUROPE, CHN"				
21	930-703	2					
22	315-877	1					
23	608-VVM	1	608VVC2PS2L				
24	325-492	1	"35, 44-46"				
25	-----	1					
26	980-063	1					
27	-----	1					
28	325-481	1					
29	305-499	2	M3.5 x 6				
30	980-063	1	"EUROPE, CHN"				
31	959-140	1	"INA, SIN"				
32	305-409	1					
33	945-161	2					
34	999-043	2					

 SI15SB

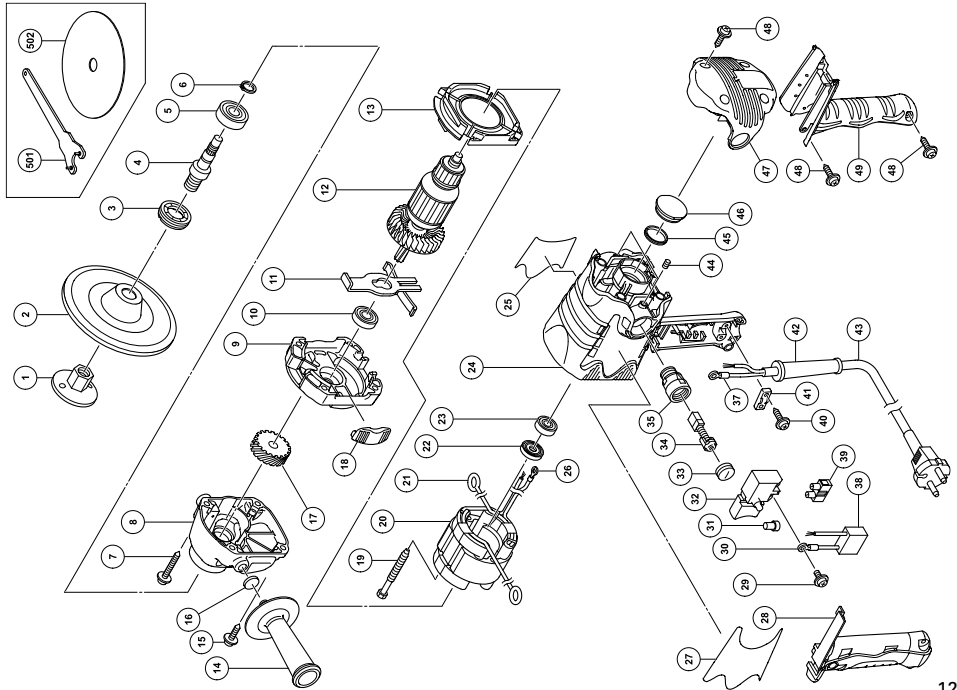

A	B	C	D	A	B	C	D
1	953-381	1		38	930-039	1	"CHN, TPE"
2	935-652	1		39	938-307	1	"MAL, CHN"
3	944-005	1		40	984-750	2	D4 x 16
4	325-501	1		41	937-631	1	
5	620-1DD	1	6201DDCMPS2L	42	953-327	1	D8.8
6	939-542	1		43	-----	1	
7	309-778	2	D5 x 55	44	938-477	2	M5 x 8
8	325-499	1	"16"	45	995-662	1	
9	325-498	1		46	315-069	1	
10	600-0DD	1	6000DDCMPS2L	47	325-489	1	
11	325-477	1		48	301-653	7	D4 x 20
12-1	360-758C	1	110V	49	325-490	1	
12-2	360-758E	1	220V-230V	501	325-491	1	
12-3	360-758F	1	240V	502	314-079	1	150MM C-P50
13	325-474	1					
14	994-322	1					
15	323-209	2	D5 x 35				
16	937-033	2					
17	325-500	1					
18	325-483	1	D5 x 45				
19	992-509	2					
20-1	340-656D	1	110V "21, 26"				
20-2	340-656E	1	220V-230V "21, 26"				
20-3	340-656F	1	240V "21, 26"				
20-4	340-656G	1	220V-230V "21, 26"				"CHN"
21	930-703	2					
22	315-877	1					
23	608-VVM	1	608VVC2PS2L				
24	325-492	1	"35, 44-46"				
25	-----	1					
26	980-063	1					
27	-----	1					
28	325-481	1					
29	305-499	2	M3.5 x 6				
30	980-063	1	"CHN, TPE"				
31	959-140	1	"INA, SIN, TPE"				
32	305-409	1					
33	945-161	2					
34	999-043	2					
35	958-900	2					
37	980-063	1					

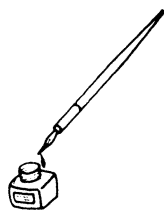 

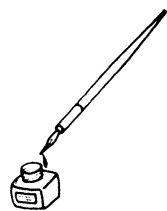

服务中心

日立工机商业（中国）有限公司
上海市长宁区遵义路100号
虹桥上海城B栋2686 - 2689室

制造商

日立工机（马来西亚）有限公司
马来西亚柔佛州士乃

 **Hitachi Koki Co., Ltd.**

810

Code No. C99143923
Printed in Malaysia