

HITACHI
Inspire the Next

Cordless Cleaner

18V-5.0Ah / 3.0Ah R 18DA

NEW

C o r d l e s s c l e a n e r



Powerful Suction. Optimum Ease of Use.

Switch Panel with 3 Suction Modes

Powerful Suction. Optimum Ease of Use.

Switch Panel with 3 Suction Modes

More Ergonomic Switch Panel



Placed closer to the hand grip, the switch panel is more easily accessible with one hand.

LED for Better Vision while Vacuuming.

Cordless cleaner

Powerful Motor Ensures a Strong Suction

Max Suction Power

40w 18V High

Three Suction Modes



Switch Panel


The suction power can be switched between 3 modes: 3 HIGH, 2 MID and 1 LOW.

Indicator Lamp

When the battery supply is low during operation of the appliance, the indicator lamp will light up.

Pre-filter Cleaning System

- 1 Turn the dust case a couple of times.
- 2 Dust is collected in the dust case.
- 3 Empty the dust case.

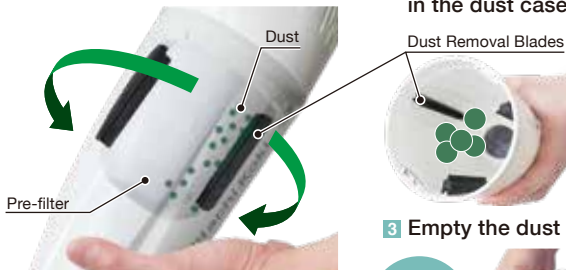

Built-in dust removal blades scrape off the dust accumulated on the pre-filter. This makes the pre-filter cleaning process more hygienic.

Easy and Quick Dust Disposal

The dust case is designed for easy dust removal and eliminates the need for disposable bags for dirt collection.

Specifications

Battery Voltage		18V	
Dustcase Capacity		560mL	
Continuous Operating Time	Battery	BSL1830	BSL1850
	3 (High)	Approx. 24min.	Approx. 40min.
	2 (Mid)	Approx. 29min.	Approx. 48min.
Suction Work Rate	1 (Low)	Approx. 40min.	Approx. 66min.
	3 (High)	Approx. 40W	
	2 (Mid)	Approx. 30W	
Overall Length	458mm (18-3/32") with BSL1850		
	Weight	1.6kg (3.5lbs.) with BSL1850	
Standard Accessories		Battery & Charger (BSL1830 & UC18YKSL or BSL1850 & UC18YFSL) Flooring Nozzle, Crevice Nozzle, Extension Pipe (with Nozzle Holder)	



Optional Accessories

Name	Rack Brush	Round Brush	Flexible Hose	Angle Joint*	Extension Pipe (Short)	Pre Filter	Filter (1 pc.)	Filter (10 pcs.)
Shape								
Code No.	332712	332713	332714	332715	332716	337792	337793	371824

*Angle joint cannot be directly installed to the main unit. Use it as a set with the extension pipe or another accessory.

Distributed by:

Hitachi Koki Co., Ltd.

www.hitachi-koki.com